



# Assembly Manual - PHITS I34A


- 1 . Remove the top cover of your speaker.
- 2 . Disconnect the plug TP1 from the front panel.

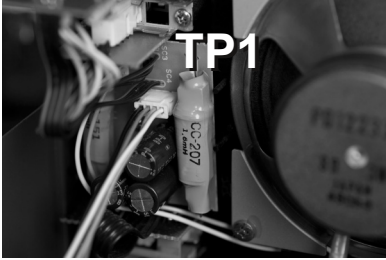

- 3 . Remove the rest of the screws of the front panel and detach it.
- 4 . Remove the piece of felt and carefully release the foam spacer.
- 5 . Remove the screws from the lower part of the back cover.
- 6 . Place the plate B inside as show the picture, taking care to snaps below the PCB of the connectors.

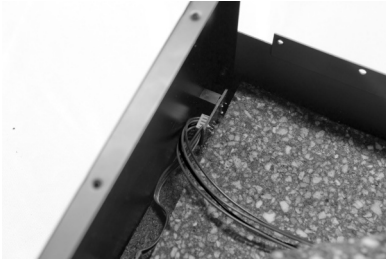


- 7 . Place the plate K on the back cover centered to the sides, leaving a gap of 7 mm on both sides and taking care that it rests on the connectors. Strong press the plate to fix well.

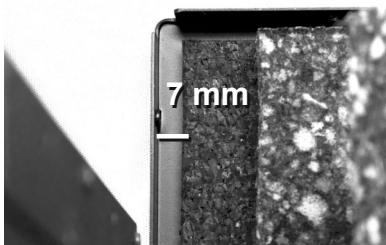

- 8 . Remove the screws at the side of the back cover and remount the screws of the lower part.
- 9 . Place the plates L and R such a way they snap between the plates B and K.



- 10 . Reconnect the plug TP1 and remount the front panel of your speaker.
- 11 . Place the grey foam between L and R, close to plate K as shown in the picture.

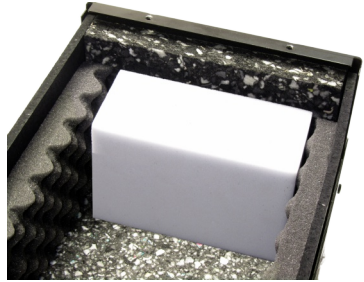

- 12 . Fit the plate T between the plates K, L and R.
- 13 . Replace the top cover of your speaker. Be careful, the engagement with the front panel is very tight.



- 14 . Mount all screws.